USER MANUAL
FOR DIGITAL RECEIVER

1. Interface button

2. Technique parameter

Product model	ZR719D-S
Working voltage	DC 5V
Working current	1000mA
Working temperature	-10℃ - + 10℃
Wireless transmission	Up to 200m
Maximum capability	32GB SD card
Microphone	Built-in high sensitive microphone ,balance synchronous transmission
Image frame	VGA(640*480),25fps/QVGA(480*320)30fps
Lens	5G import glass, HD coating lens
Sensor	OV7725, 300,000 pixel HD CMOS sensor
Encoded mode	MPEG-4
Video record time	10s/pc
File format	AVI
Compress format	Motion JPEG
Wireless transmission	Digital wireless audio & video transmission
Operating Frequency	2400Mhz-2483.5Mhz(FSK)
Encryption technology	Advanced digital encryption technology ,18 intelligence frequency modulation

Mainframe weight	300g

3. Basic operation

1). Connect the camera/receiver/TV with power cable.

First, please input your SD card to the Receiver Recorder. Second, connect your camera and Receiver Recorder via Power Cable. Third, connect your Receiver to TV via AV cable. Fourth, connect the antenna to the wireless camera and receiver well.

2) Be pair between camera and receiver
One receiver can support total five cameras: four wireless cameras and one wired camera. For each channel the receiver needs to match the camera.

① Press Menu to CAMERA SETTING interface, click OK.

② Be in PAIRING, click OK to CAM1.

③ Open the Camera Front Cover, click Pairing Button , which is below the lens.

④ Click the CAM1 in Receiver PAIRING interface, meanwhile, click Pairing Button in camera. They will match to be one pair. And show OK.

⑤ When pair them well please close the camera front cover

Note: For the camera 2/3/4, the similar operation as above.

4. How to set
1) Camera Setting

CAMERA SETTING	
ITEMS	OPERATION
PARING	CAM1/2/3/4 in pair with Recorder Channel 1/2/3/4

ACTIVATION	ON/OFF
BRIGHTNESS	Adjust low/high
VOLUME	Adjust low/high
MD SENSITIVITY	Motion Detect sensitivity adjustment
MD AREA	Motion Detect area setting

2) Record Setting

Items	Operation
Record Time	1Min(minute), 2Min, 5Min, 10Min
Date Stamp	On/Off
Snapshot Quality	High/Low
SD Over Write	On/Off
SD Format	On/Off

3) Record Trigger Setting

Item	-------	-------	Motion
State	Time From	Time Over	Motion/schedule/none
Operation	OK/UP or Down	OK/UP or Down	UP/Down

4) System Setting

Items	Operation
Time Setup	Year/Month/Day/Hour/Minute
TV Output	NTSC/PAL/X
Motion Detection	ON/OFF
Camera Switch Interval	5Sec, 10Sec, 15Sec
Resolution	VGA/CIF/QVGA
USB Output	NONE/PCAM/MSC
Default Setting	Confirm/Cancel

5) Event List

To view the video or picture you've made.

6) Alarm Setting

Just press OK to adjust On/Off state.

7) Zoom Setting

Press Ok to enter the Zoom setting. No zoom function for latest item.

8) SD Card State

It shows the capacity of SD Card supports.

5. How to playback in computer

To install one special play software firstly. It names “RFSMediaPlayer_v1.0.9.54.exe”. Otherwise it can’t playback or without the sound.

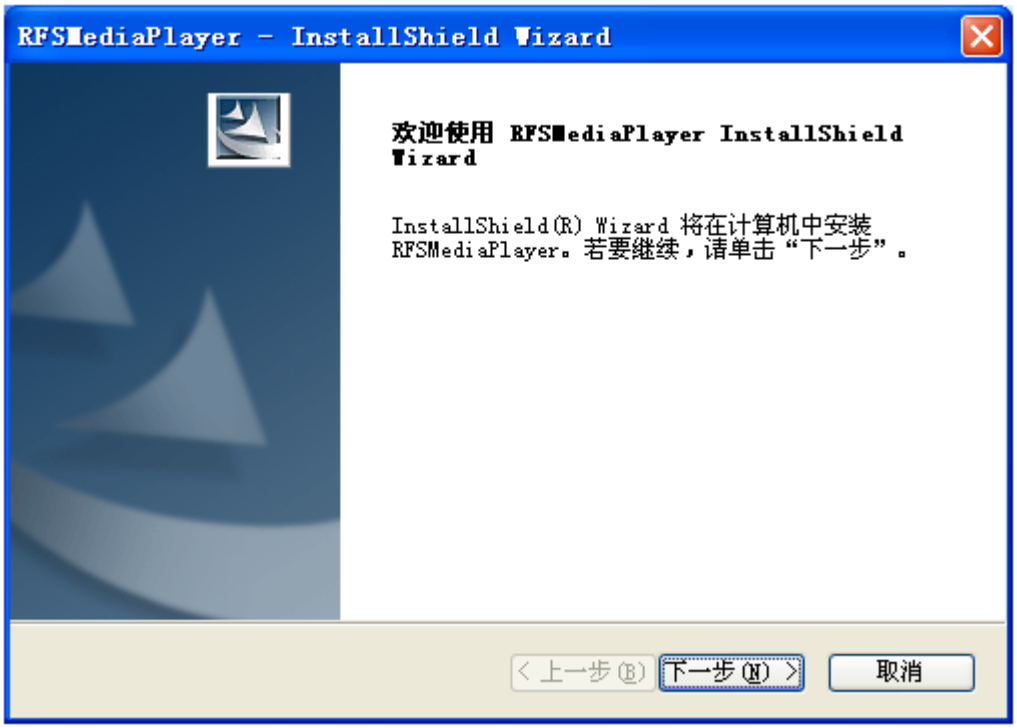

Click Next(下一步) to continue. The status is as below:

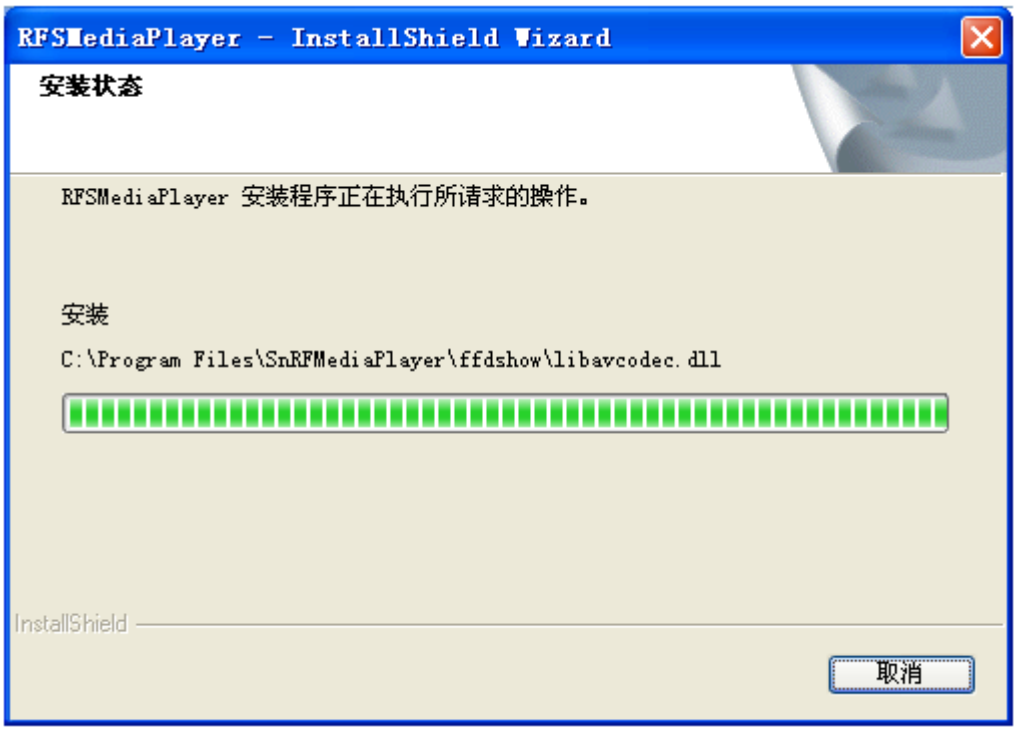

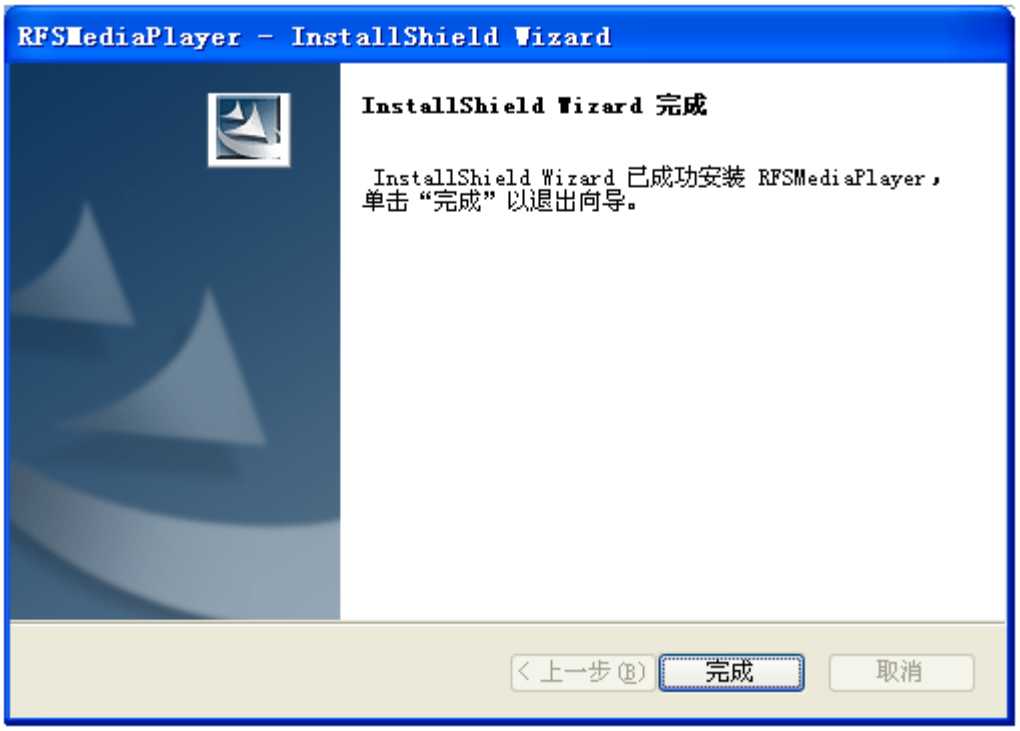

“完成”means “Finish”. Click it to finish the installation. Well, now it is ok to playback the record video.

6. Packing list for digital DVR and camera kit:

Camera x1
Receiver x1
Power Adapter x2
AV cable x1
Camera Bracket/nail x1
Antenna x2